
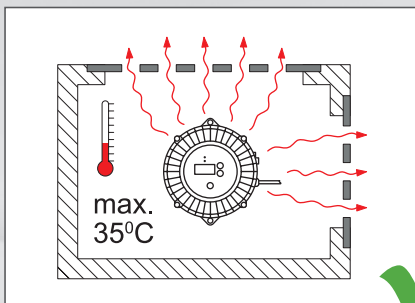
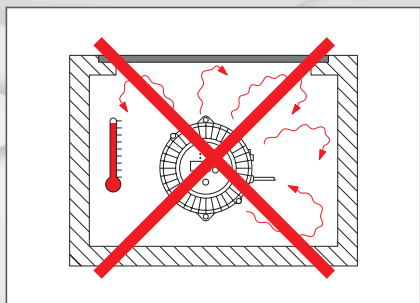
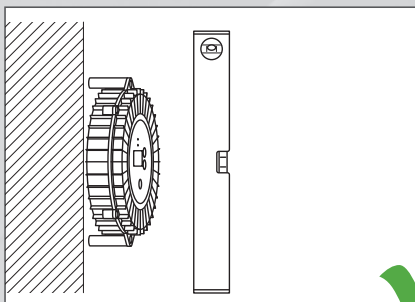
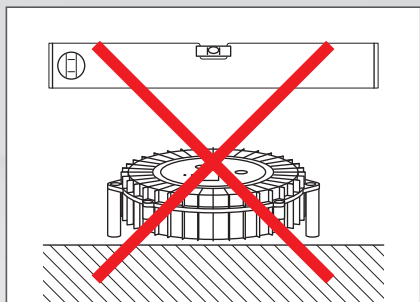
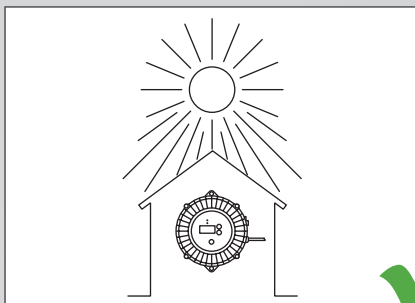
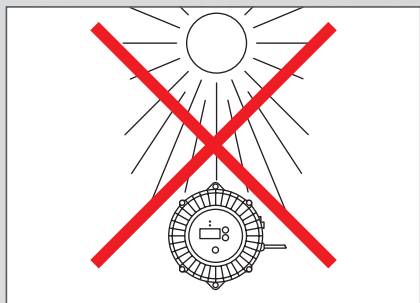


e-finity®

Einbau | Installation

Messner
moves water...

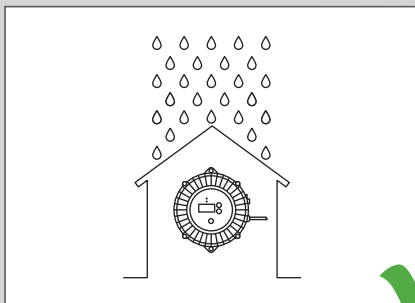

e-finity®

Betrieb | Operation

